 


# MODERN FORMS SMART FANS

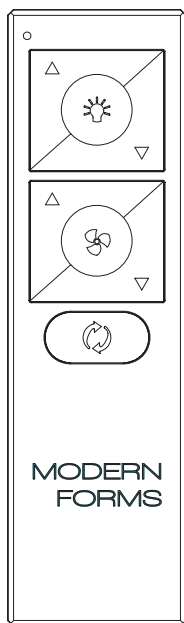 


F-RC-WT

OPERATION INSTRUCTIONS




COMPATIBLE WITH



## 1 Pairing

To pair your remote control:

 1. Power cycle your fan by turning off the power at the circuit breaker.
2. Press and hold and buttons on remote control for 10-15 seconds.
3. The LED will blink green then remain solid green.
4. The green LED along with audible beeps will indicate that pairing is successful.
5. Test remote control using the steps in section 2.



Press and Hold

FIG.1

**NOTE:** A maximum of 2 fans can be operated using the remote control.

button: Switch between Summer and Winter Mode.

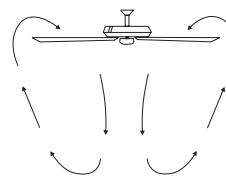 


FIG.3

**SUMMER MODE (Counter-Clockwise):**  
A downward airflow creates a cooling effect (**FIG. 3**). This allows you to set your air conditioner on a warmer setting without affecting your comfort.

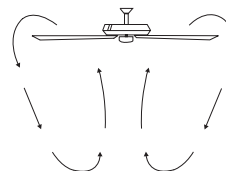 


FIG.4

**WINTER MODE (Clockwise):**  
An upward airflow moves warm air off the ceiling area and re-distributes the warm air that hovers around the ceiling to the living space. This should allow for savings on heating costs (**FIG. 4**).

**NOTE:** To operate the reverse button on your fan, press the button while the fan is running

## 2 Remote Control Operation

### Remote Control Button Functions

 


FIG.2

- button: Turns the light ON or OFF.  
Press or hold to increase the light level.  
Press or hold to decrease the light level.
- button: Turns the fan ON or OFF.  
Press or hold the button to increase fan speed.  
Press or hold the button to decrease fan speed.


**NOTE:** Your fan features 6 speeds. An audible tone will indicate when the speed is increased or decreased. When the fan has reached the minimum/maximum speed level the audible indication will stop.

## 3 Unpairing

**NOTE:** Unpairing must be completed within 3 minutes of turning the power on to the fan receiver.


1. When you re-engage power to the fans you want to unpair, press and hold the and buttons for 4 seconds.
2. The LED will alternate red/green, blink green, and the receiver will beep to indicate that unpairing is successful.

 FIG.5

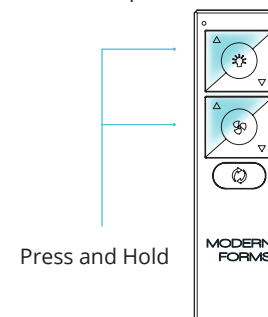

Press and Hold


## Package Contents

 

Remote



 Screws



Wall Cradle




 


Batteries

Modern Fans technical support  
1-800-526-2588


## 4 Fan Wi-Fi Reset

**NOTE:** This function only resets the Wi-Fi credentials.

1. Press and hold the   and   buttons for 6 sec.
2. The LED will light red, blink green, and return to solid red, and the receiver will beep to indicate that Wi-Fi reset is successful.
3. After the Wi-Fi resets, the fan will broadcast its service set indicator (SSID).

**NOTE:** If you are updating your router, the fan will still appear in the Modern Forms app but will need to be re-paired. You can change the name of your fan on the Modern Forms app upon re-pairing.

 FIG.6

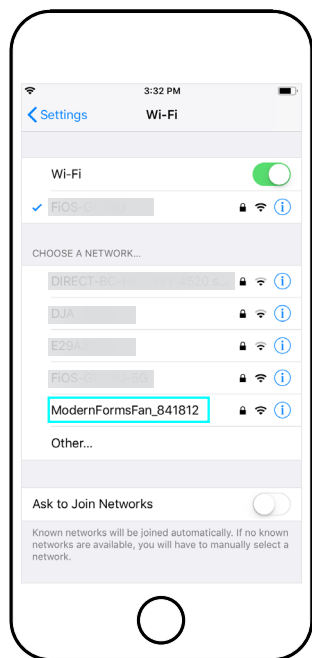

## 5 Factory Reset

**NOTE:** This will remove remote control and app connections.

Remote Control Factory Reset:




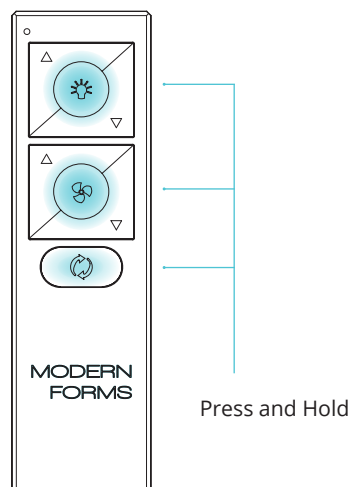 
1. Press and hold the ,  and  buttons for 10 seconds.
2. The LED will blink red and return to solid red, and the receiver will beep to indicate that the factory reset is successful.

FIG.7




## 6 Receiver Button Factory Reset

1. Press the reset button on the receiver until the receiver control beeps.
2. Power cycle the circuit to complete the process.

**NOTE:** This will remove remote control and Modern Forms app connections.

 FIG.8

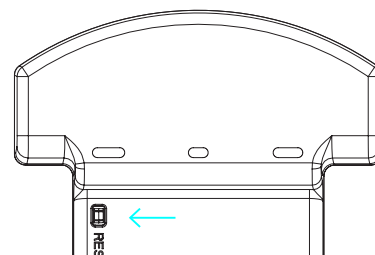

## Rules and Regulations

**CAUTION:** The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

### FCC Supplier's Declaration of Conformity

Brand name: Modern Forms

Model number: F-RC-WT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WAC LIGHTING CO.

44 Harbor Park Drive, Port Washington, NY 11050

Tel: 1-800-810-6615