

## THE ENGINE IS VIBRATING. WHY IS THIS HAPPENING?

Check the engine and transmission mounts to see if they are broken or worn. Often times hard or sagging engine mounts can cause vibrations at idle even if they are not broken. Vibrations can also be caused by malfunctioning mechanical components such as a failing air conditioner or alternator. Internal engine and transmission components can cause this also.