

# I'M TRYING TO START THE CAR, BUT THE IGNITION WON'T TURN.

Dirt and debris can block the key lock and prevent it from working properly. Lubricate if necessary. The steering lock may be preventing you from turning the key also. Turn the steering wheel slightly in either direction while turning the key.