



KBC
KENNELS
DOG SPORTS™

Mondioring Palisade Frame Instruction Manual




Parts

Each part is marked with Yellow dots. The parts marked with one dot are for the right side of the palisade and the parts marked with two dots are for the left side of the palisade.



Step #1


Start with both base sections, the center crossbar, and both angle supports.

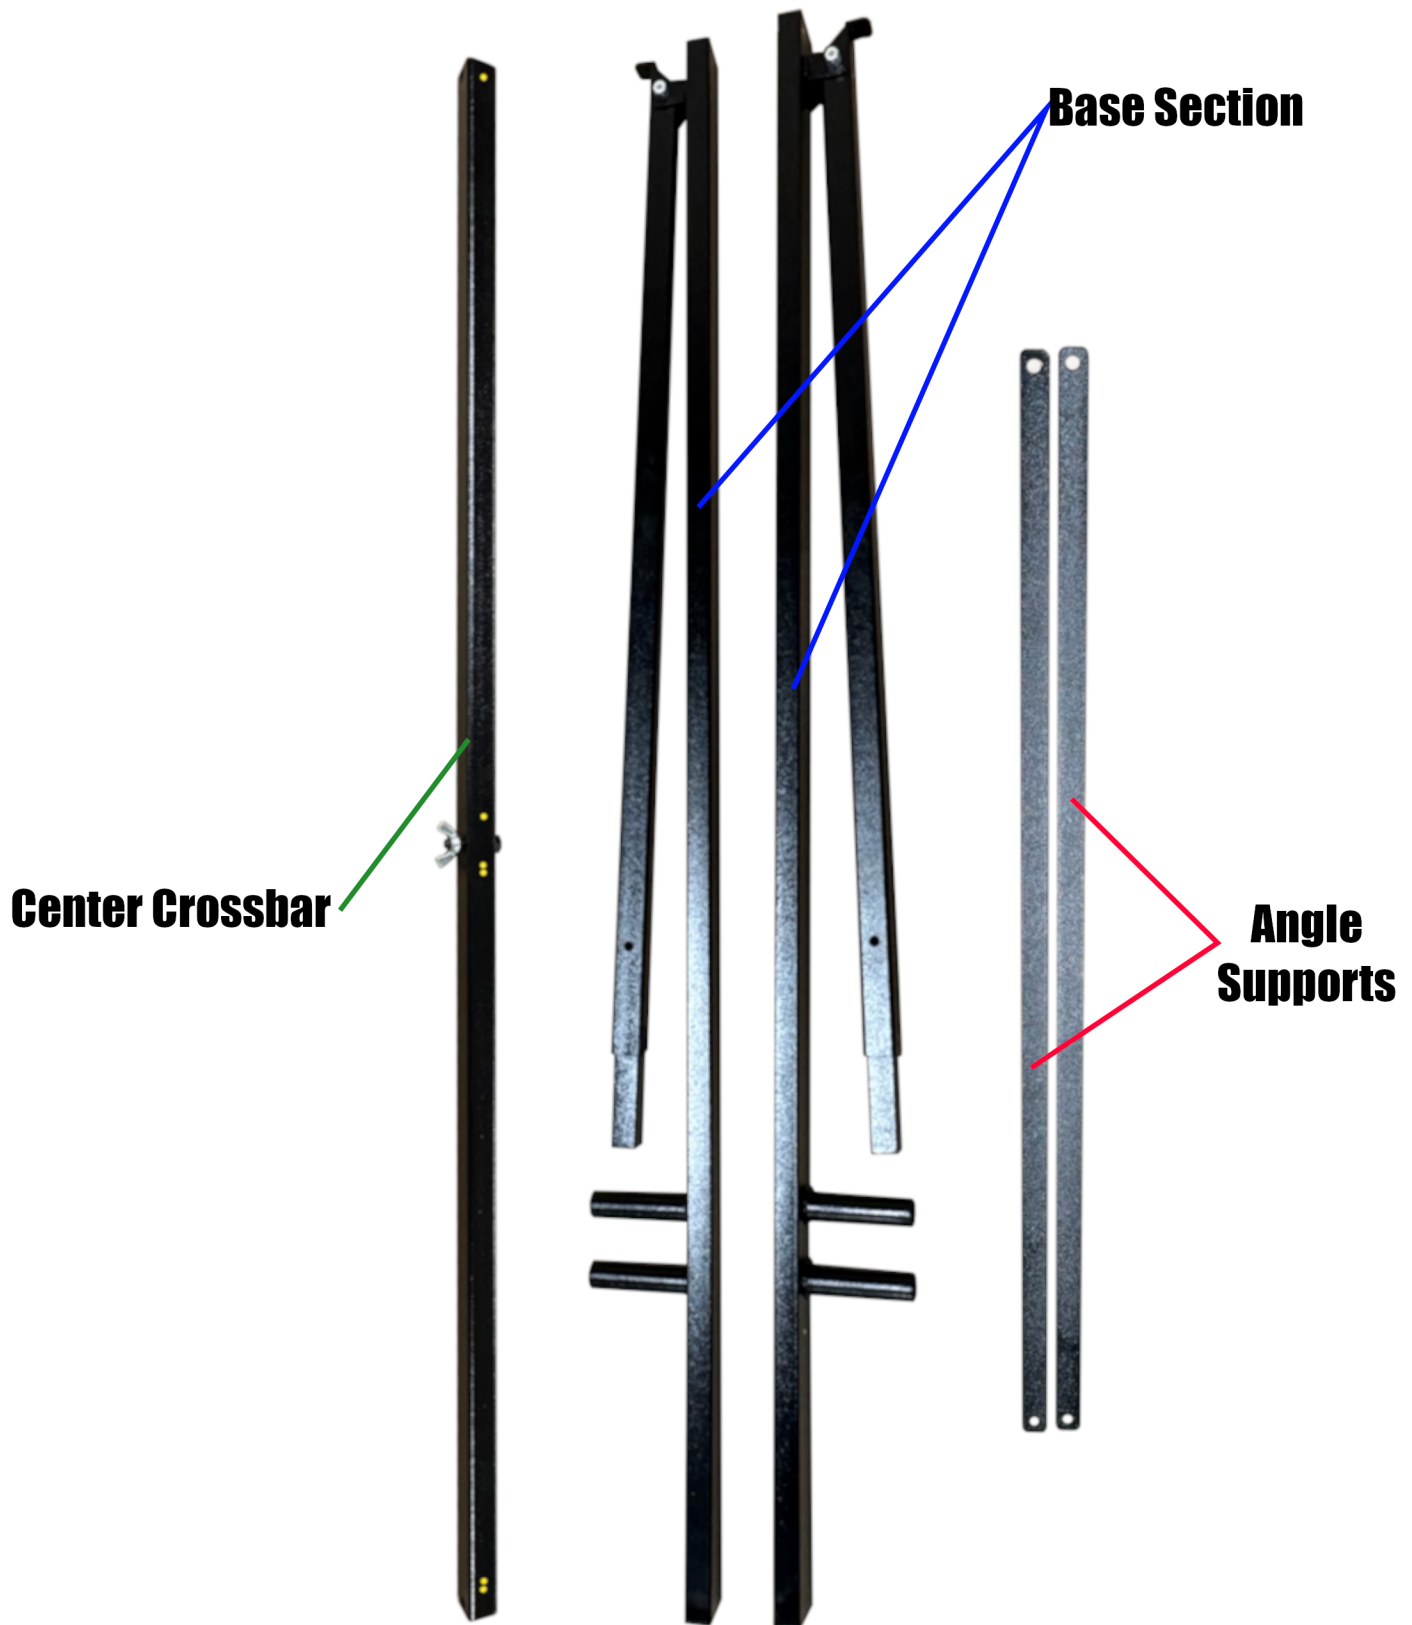

Step #1

On a flat, level area, set bases in position, using center crossbar to space the base sections apart.

Attach one side of each angle support to the center of the crossbar using the threaded stud and wing nut.

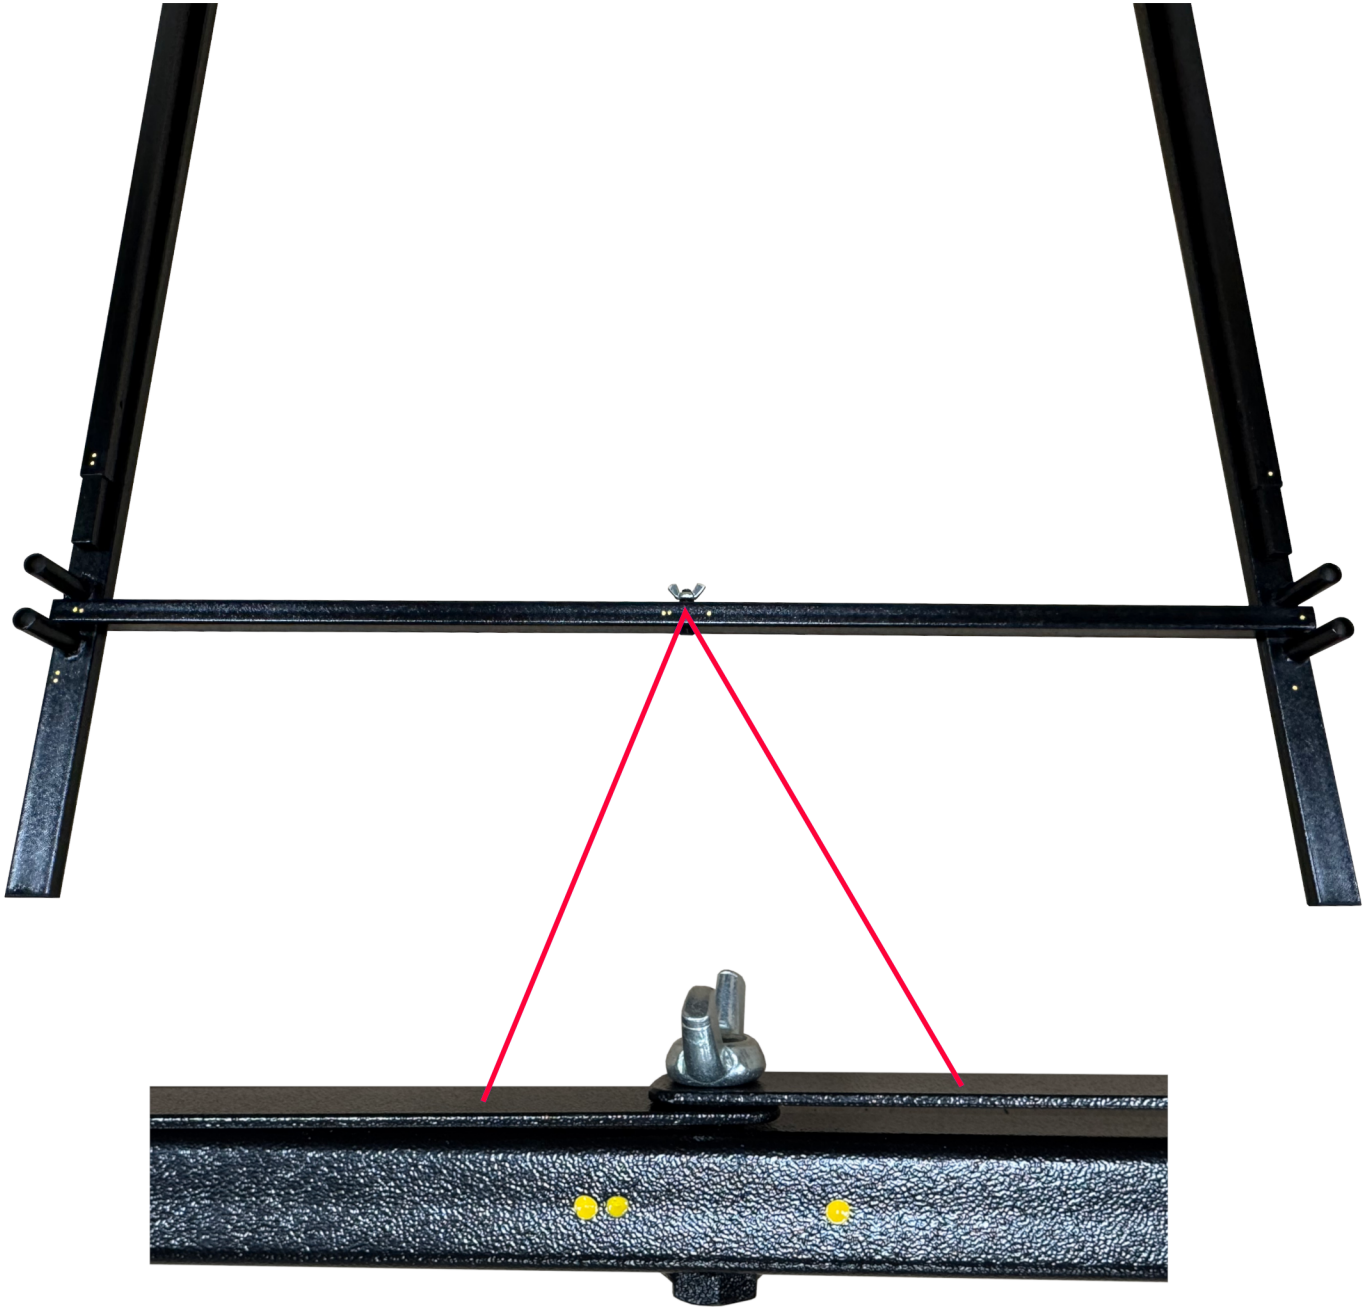

Step #2


Slide the lower upright section onto the two pegs on the base. Tighten the set screws on each side using the provided 3/16" allen key



Lower Upright



Insert pin through the bottom of the upright section, connecting the center crossbar.

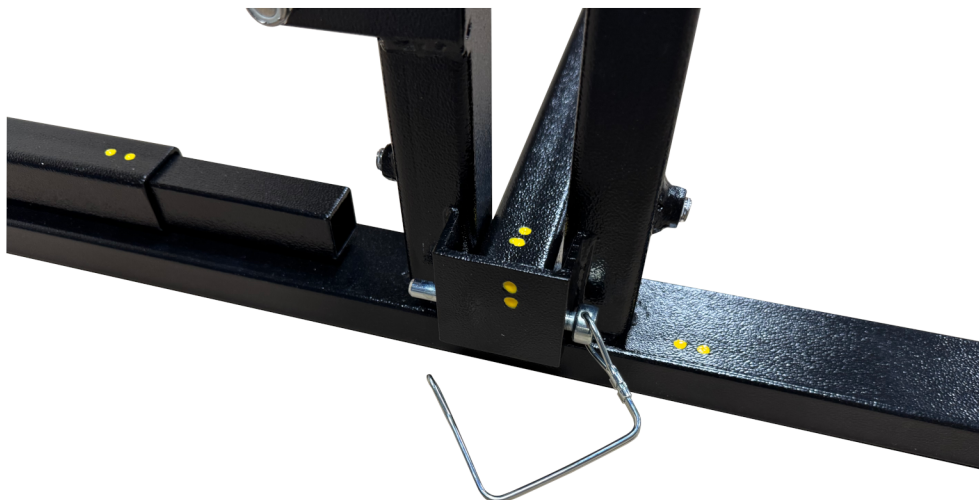

Step#3


Connect both angle supports to the lower uprights using the threaded studs and wing nuts.

Insert bottom fixed wood panel before moving to step #4




Step #4

Slide the upper uprights onto the pegs of the lower uprights and tighten the set screws.

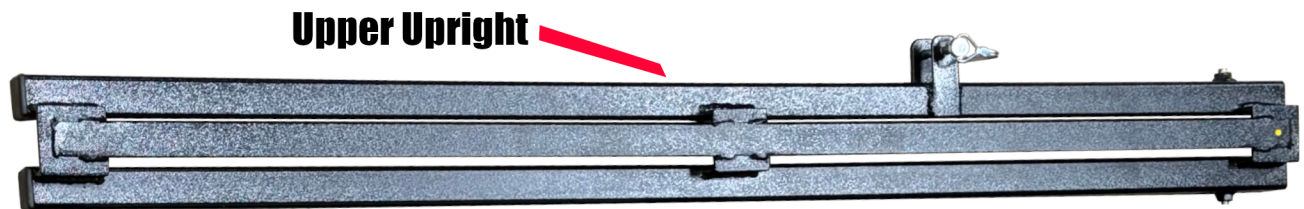

Step #5

Lift the lower ramp bar connected to the base section and extend using the upper ramp bar. Tighten the set screw located on the bottom side to sucure.

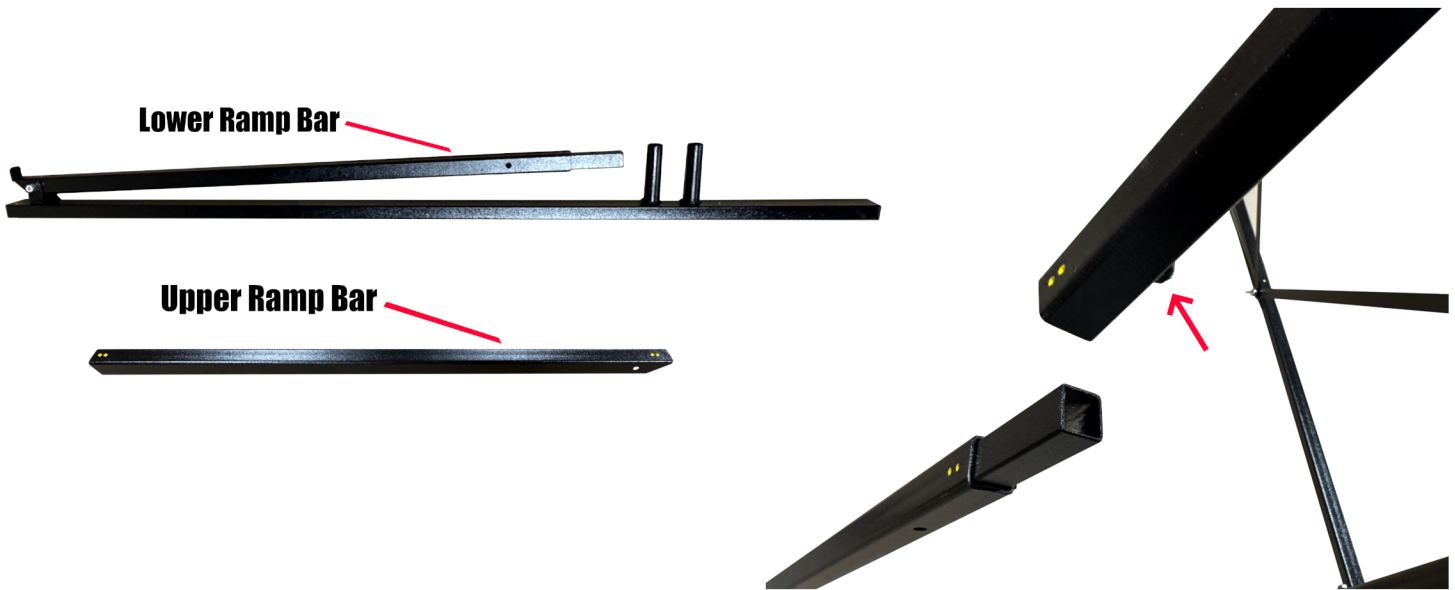

Connect upper ramp bar to upper upright using pin



Step #6

Remove pin from ramp support on back side of lower upright and hinge to position on lower ramp bar. reinstall pin to hold in position.

