

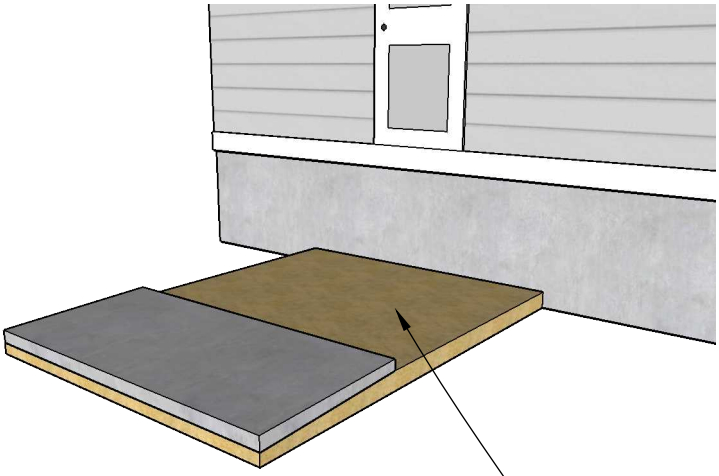



Base Requirements
1: should be level
2: 2" below walkway/ finish grade
3: 12" wider than precast stair

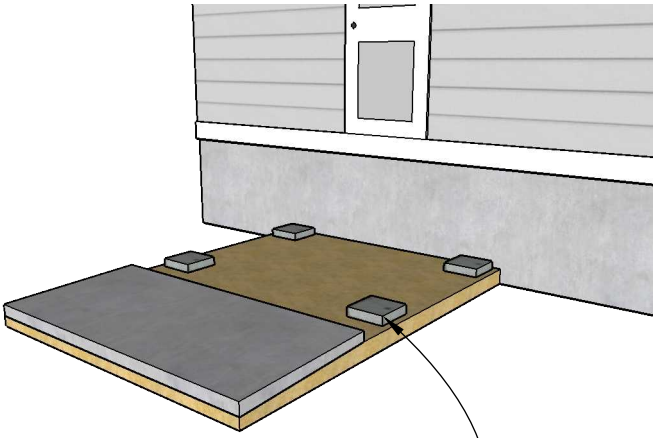

we set pads and or steel brackets to finish height of the bottom of precast.

stairs installed on pads or steel brackets

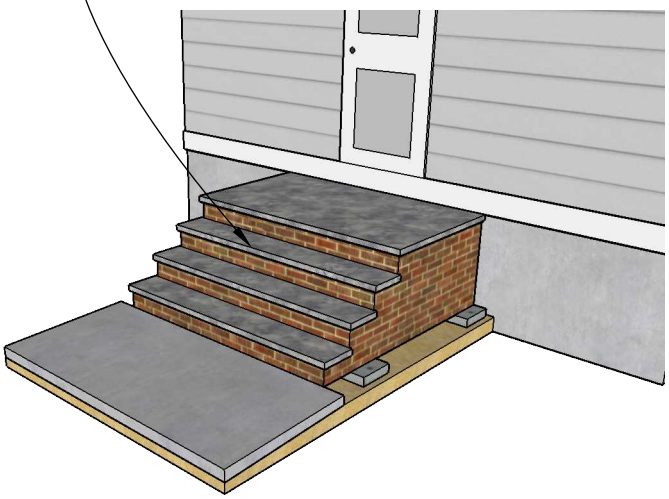

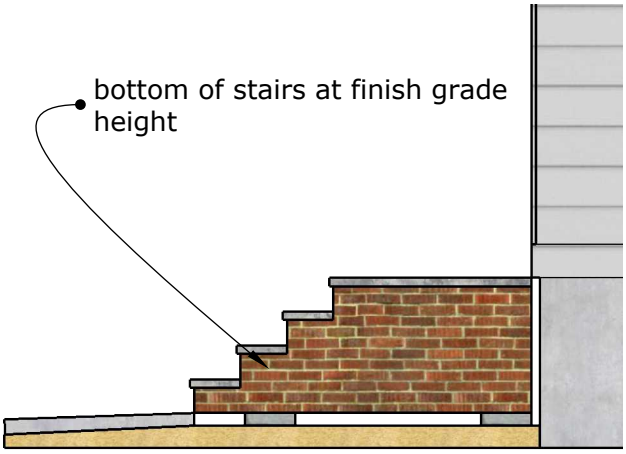

bottom of stairs at finish grade height

MEANS Pre-Cast

Requirments for stair removal and preparation for precast installation

151 Adams Street Braintree, Ma 02184 781-843-1909 (fax)781-843-1911 www.meansprecast.com